

Quick installation and start-up guide

FPBA-01 PROFIBUS DP adapter module


Safety instructions



WARNING! Obey the safety instructions. If you ignore them, injury or death, or damage to the equipment can occur. See the user's manual.

Mechanical installation


1. Pull out the lock.
2. Install the module carefully to an option module slot of the drive. See the drive hardware manual.
3. Push in the lock.
4. Tighten the screw to torque 0.8 N·m using a Torx TX10 screwdriver.

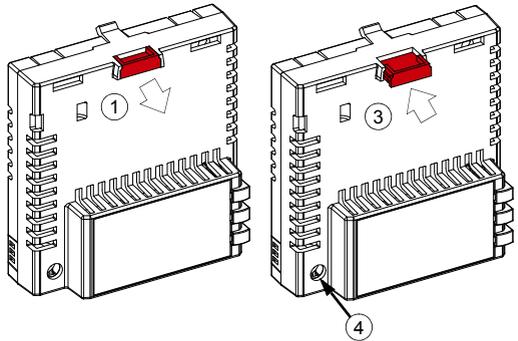

WARNING! Do not use excessive force, or leave the screw too loose. Over-tightening can damage the screw or module. A loose screw decreases the EMC performance, and can even cause an operation failure.

Electrical installation

Layout of the module

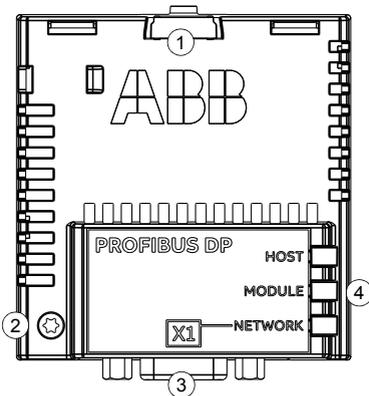


No.	Description
1	Lock
2	Mounting and grounding screw
3	Bus connector [X1]
4	Diagnostic LEDs

■ Connection procedure

It is recommended to use a PROFIBUS-approved D-SUB 9 connector. These connectors have a built-in termination network and inductors for station capacitance compensation.

Connect the cable to the D-SUB connector as shown in this figure.

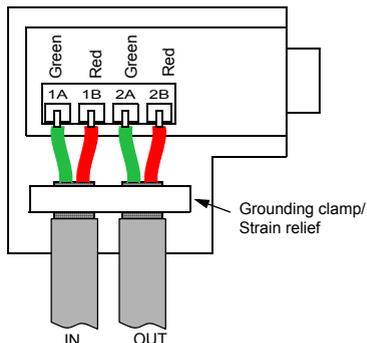

Start-up

When the module is connected to the drive, the drive control program sets the applicable parameters. See the appropriate drive manual.

■ Basic parameter settings

Index	Name	Value
20.01	Ext1 commands	Fieldbus A
22.11	Speed ref1 source	FBAA ref 1
28.11	Frequency ref1 source	FBAA ref 1
50.01	FBAA enable	Enable (or select the option slot in which the module is installed)
50.02	FBAA comm loss func	Fault
51.02	Node address	Set the node address of the module according to the network configuration.
51.05	Profile	The ABB Drives communication profile is the default value.
52.01	FBAA data in1	SW 16bit
52.02	FBAA data in2	Act 16bit
53.01	FBAA data out1	CW 16bit
53.02	FBAA data out2	Ref1 16bit

To take the settings into use, validate and refresh the parameters with parameter *51.27 FBA par refresh*.

Further information

See the latest version of *FPBA-01 PROFIBUS DP adapter module user's manual* (3AFE68573271 [English]) in ABB library (www.abb.com/drives/documents).

For more information on fieldbus options and protocols provided by ABB Drives, see the fieldbus communications web page (new.abb.com/drives/connectivity/fieldbus-connectivity).



[FPBA-01 manual](#)



[Fieldbus communications web page](#)



3AXD50000158188A

3AXD50000158188 Rev A (EN) 2017-11-23

Power and productivity
for a better world™

