


Continued from other side

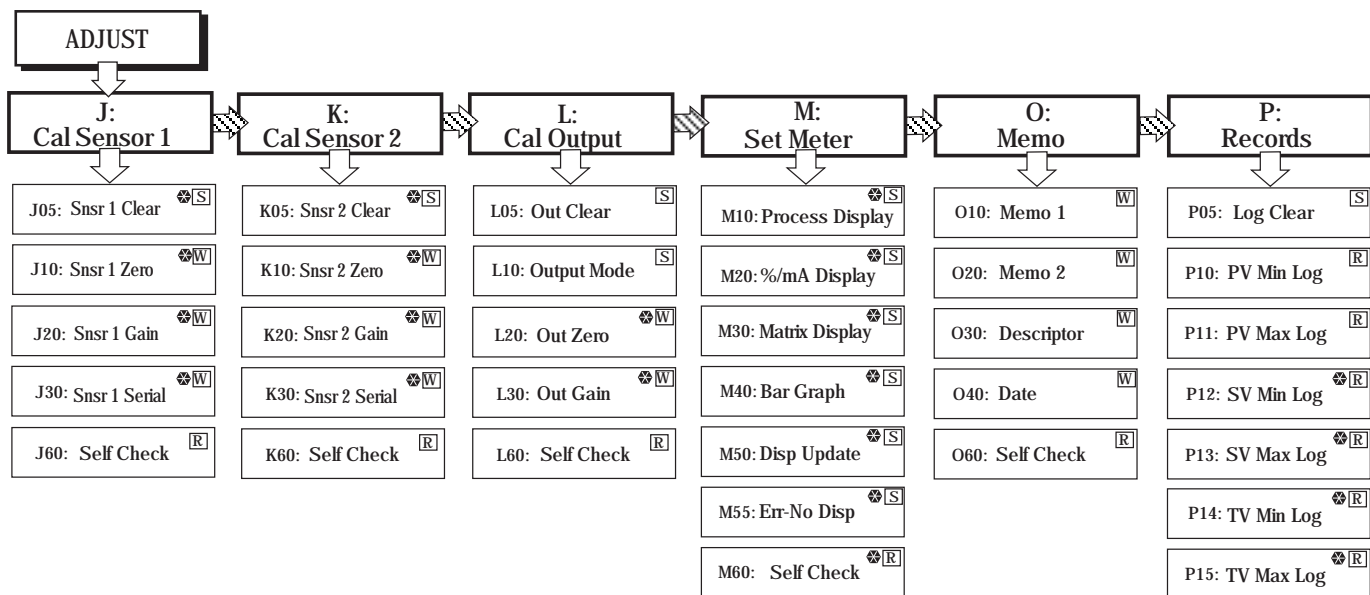

ERROR CODES


Integral Display	Error Descriptions	Action
Er.01	Output Too Low	Check LRV
Er.02	Output Too High	Check URV
Er.03	Sensor 1 Failure	Check connections or replace sensor 1
Er.04	Sensor 2 failure	Check connections or replace sensor 2
Er.05	S1 Signal Error	Check sensor connections and sensor type
Er.06	S2 Signal Error	Check sensor connections and
Er.07	Ambient Temp Low	Use heat source to raise temp of transmitter
Er.08	Ambient Temp High	Move transmitter away from heat source
Er.09	Sensor Backup	Check sensor for cause of failure
Er.10	Illegal PV Map	Correct PV mapping
Er.11	Term Sensor Failure	Contact service personnel
Er.12	EEPROM Failure	Contact service personnel
Er.13	CPU Failure	Contact service personnel
Er.14	A/D Failure	Contact service personnel

[E] = Execute
 [R] = Read Only
 [S] = Select
 [W] = Read and Write

⊗ Parameter may not be displayed, depending on other parameter settings

YTA 320

BRAIN Communicating Temperature Transmitters

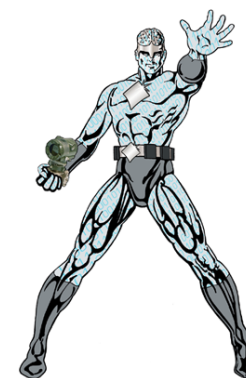

Basic Programming Pocket Reference Guide



YTA320 Brain Communications

Function Block Diagram

